

Programming Dish Network remote to TV By Scan

1. While at the device location, point the remote at the device. Press and hold the device mode button on the remote.

All four mode buttons should light up



2. Press the receiver POWER button on your DISH remote

The device button should light up



3. Press the UP or DOWN arrow on the remote (about one press per second). Stop as soon as the device turns off. This process may take several minutes.

The TV should turn off



4. Press the POUND (#) button

The device Mode button should flash 3 times



5. Press the POWER button on the remote to turn the device on. If this does not work, return to step 1.



The device should turn on and respond to remote command



Get Remote Codes Currently In Use

6. Press and hold the TV mode button on the remote until all four mode buttons at the top of the remote light up



7. Press the POUND (#) button twice



8. The mode light flashes the number for each digit of the device code, with a pause between the groups of flashes. A quick flash is for zero.
Example: The mode light flashes five times, pauses, flashes seven times, pauses, and flashes once quickly for the 570 code.

